

EX-PB

G25-R1




The PROFIBUS Expansion Module is connected to the RMB module by the 2 terminals on the RS485 serial line.

One EX/PB allows to manage one N/DIN relay.

The FFP, if provided, is connected to the Port available on the front of the RMB module.

One FFP unit can control up to 31 pairs RMB+EX-PB.

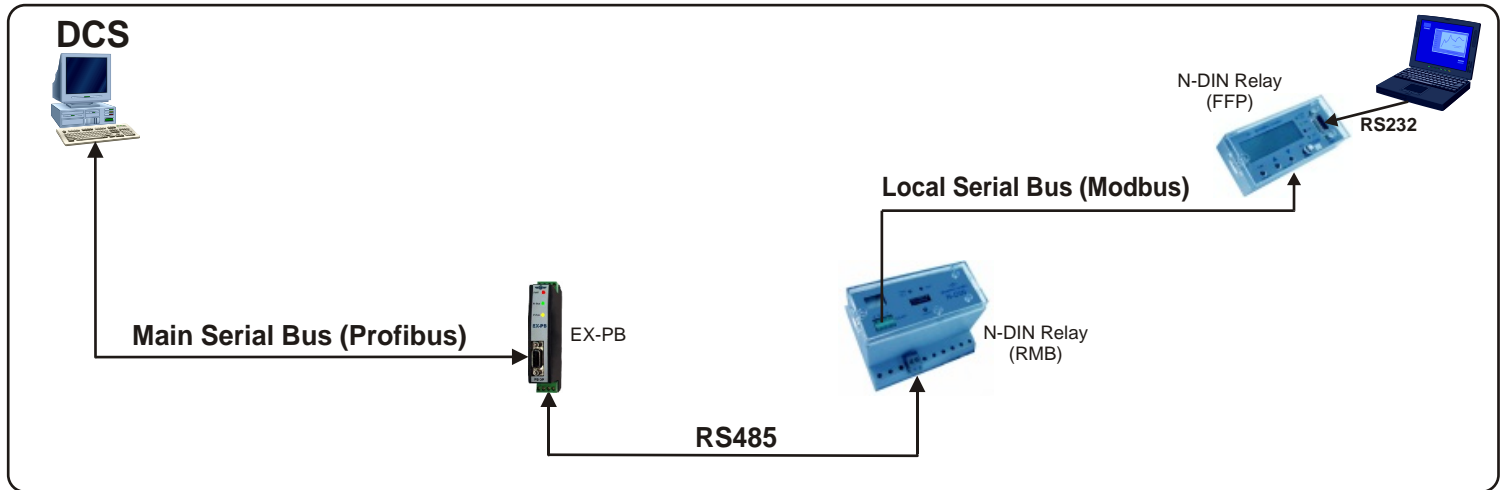

When the EX-PB is connected, the relay communicates via Profibus DP on the Main Serial Bus and via Modbus on the Local Serial Bus; whereas when the EX-PB is not connected, the relay communicates via Modbus both on the Main Serial Bus and on the Local Serial Bus.

